 



USING THE INDUCTION HOB

Scheme of the stove surface

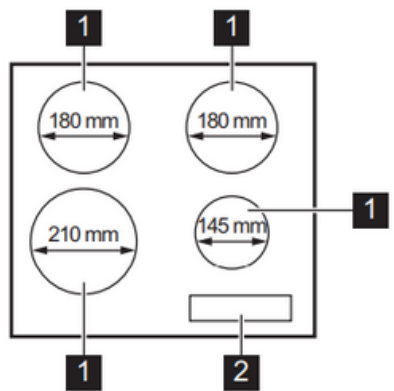

- 1 Induction cooking zone
- 2 Control panel

 Control panel diagram

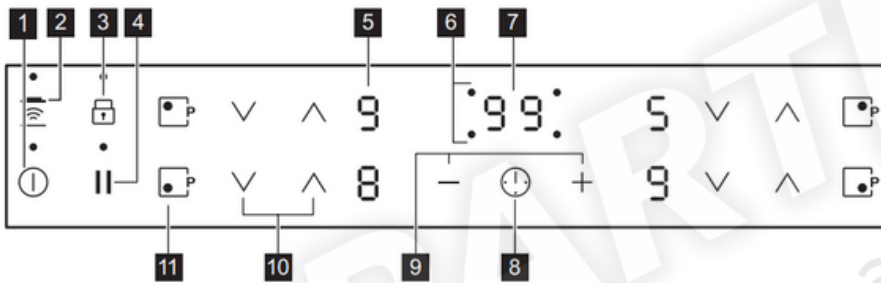

Use the sensor field to operate the device. Displays, indicators and sounds let you know what features are activated.

Sensor field	Function	Note
1	⏻	ON/OFF To switch the hob on and off.
2	🔥	Hob²Hood To turn the function on and off in manual mode.
3	🔒	Lock / child lock To lock/unlock the control panel.
4	⏸	Pause To turn the function on and off.


Sensor field	Function	Note
5	-	Heat level indicator To show the degree of heat.
6	-	Cooking zone timer indicators Shows which field the time is set to.
7	-	Timer display To show the time in minutes.
8	🕒	To select a cooking zone.
9	+ / -	To increase or decrease time
10	⬆ / ⬇	To determine the degree of heat.
11	⚡	PowerBoost To turn on the function.

Heat level indicator

Screen	Description
0	The cooking zone is switched off.
1 - 9, 2 - 6	The cooking zone is switched on. A dot means a change of half a degree of heat.
⏸	The pause is on.
R	Automatic heating is on.
P	PowerBoost is on.
E + number	This is a error.
🔥, 🔥, 🔥	OptiHeat Control (3-level residual heat indicator): Continue cooking / keeping warm / residual heat.
L	Lock / Child lock is on.
F	Unsuitable dishes, or there is no dishes on the cooking zone at all.
-	Auto power off is on.



USING THE INDUCTION HOB

Switching on and off


To turn on or off the stove, please hold for 1 second 

Automatic switch off

The function switch off the stove automatically if:

- all cooking zones are switched off
- after switching on the stove, the heat level is not determined
- if something has fallen or been placed on the control panel (dish, cloth, etc.) and it has not been removed from there within 10 seconds. An acoustic signal sounds and the stove switches off. Remove the object or clean the control panel.
- The stove gets too hot (e.g. the dishes are dry on the plate). Allow the cooking zone to cool down before using the stove again. • you are using an unsuitable cookware. Symbol  lights up and after 2 minutes the cooking zone switches off automatically. • you have not switched off the cooking zone or changed the heat level. After a while, lights up  and stove turns off.



Heat level and the stove's switch-off time:

Heat level	The stove will switch off after
 , 1 - 2	6 hours
3 - 4	5 hours
5	4 hours
6 - 9	1.5 hours

Heat level

To increase heat level touch 

To reduce heat level touch 


To switch off the cooking zone touch at the same time  & 

Lock

You can lock the control panel while using the cooking zones. This prevents accidental changes to the heat setting.





Select the heat level first.





To activate the function: touch   lights up for 4 seconds. The timer remains on.


To turn off the function: touch . The last used heat level lights up. When the stove is turned off, this function also turns off


Child lock

This function prevents accidental switching on the hob.

To activating the function: turn on the stove with . Do not select a heat level. Touch  for 4 seconds.  lights up. Turn off the stove using .

To turn off the function: turn on the stove with . Do not select a heat level. Touch  for 4 seconds.  lights up. Turn off the stove using .

To ignore the function during one cooking session: turn on the stove with .  lights up. Touch  for 4 seconds.

Select the heat level within 10 seconds. Now the stove can be used. If you turn off the stove using , the function is re-enabled.