

USING THE TV

If TV displays "no signal", "no channels have been added yet", then please check that the TV input source is correct.

CHECKING TV SOURCE



← Push source button to open the menu.

← Use arrow keys to choose the input.
Select HDMI 2.
Confirm the selection by pressing (OK) button.

HOW TO PLAY VIDEO GAME?

Lülita konsool sisse
Vali sisendiks VGA/PC

If the input source is correct, but still not show channels, then you have to do restart for the digibox.

RESTARTING THE DIGIBOX



Remove the power cable for few seconds and then plug it back.