

# USING THE TV

If TV displays "no signal", "no channels have been added yet", then please check that the TV input source is correct.

## CHECKING TV SOURCE



Use arrow keys to choose the input.  
Switch between HDMI inputs (usually HDMI 1).  
Confirm the selection by pressing (OK) button.

Push source button to open the menu.

If the input source is correct, but still not show channels, then you have to do restart for the digibox.

## RESTARTING THE DIGIBOX



Remove the power cable for few seconds and then plug it back.