

# USING THE TV

If TV displays "no signal", "no channels have been added yet", then please check that the TV input source is correct.

## CHECKING TV SOURCE



← Push source button to open the menu.

← Use arrow keys to choose the input.  
Switch between HDMI inputs (usually HDMI 1).  
Confirm the selection by pressing (OK) button.

### HOW TO PLAY VIDEO GAME?

Turn on the console  
Select VGA/PC as the input

If the input source is correct, but still not show channels, then you have to do restart for the digibox.

## RESTARTING THE DIGIBOX



Remove the power cable for few seconds and then plug it back.